


Holman

Installation Guide

40050

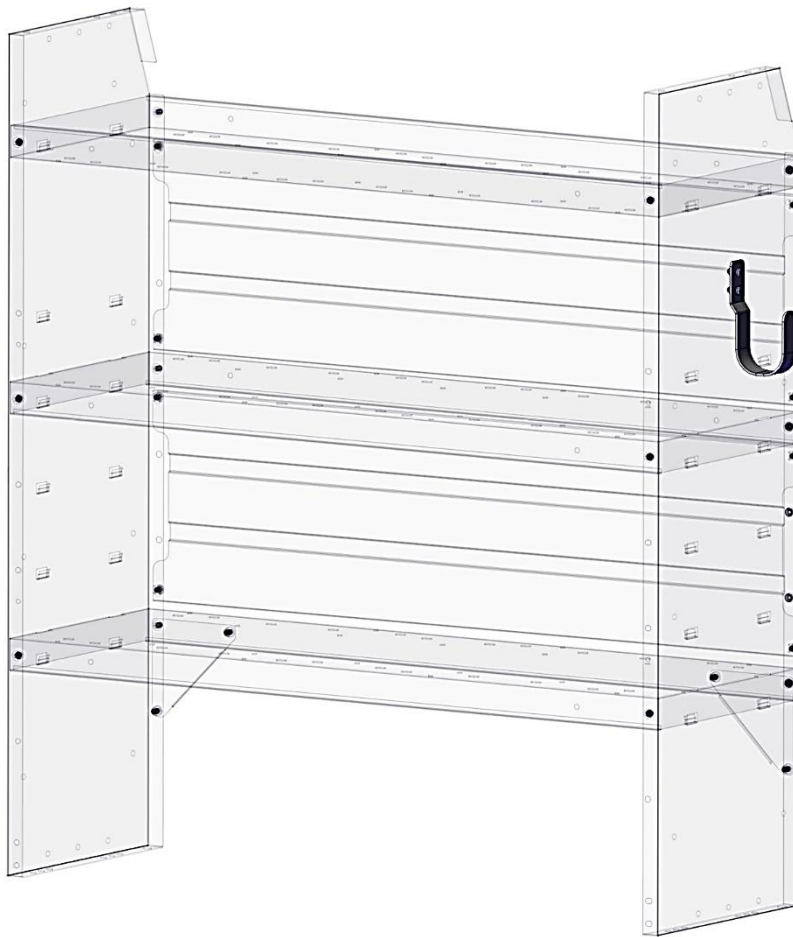

Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

Phillips Driver	7/16" Wrench and Socket
1/4" Drill	


Table of Contents

Parts List	2
Hardware List	2
Step 1 – Find Location	3
Step 2 – Attach Hook	3



Before You Begin

- Read all instructions.
- ENSURE SAFETY PRIOR TO DRILLING.
- Product can be installed on any sheet metal product. Make use of the single hook on shelves, partitions, lockers and much more.

Parts

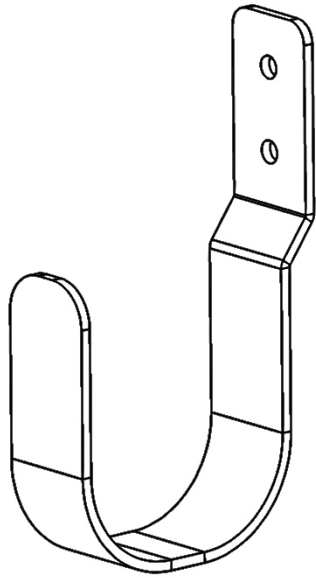
ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
A		KM9058-101	Single Hook	1

Hardware

ITEM NO.	TO SCALE	DESCRIPTION	PART NUMBER	QTY.
1		.25-20 x .625 Round Head	90272A539	2
2		.25-20 Nyloc	95615A120	2



Step 1 – Find Location

- Find desired location for single hook to be installed.
- On the side of most Holman shelf units, holes can be found, any one of these holes can be used, mark and drill a second hole. Two holes may be drilled in any desired location.
- Place single hook (A) in desired location, mark hole locations and drill with 1/4" drill.

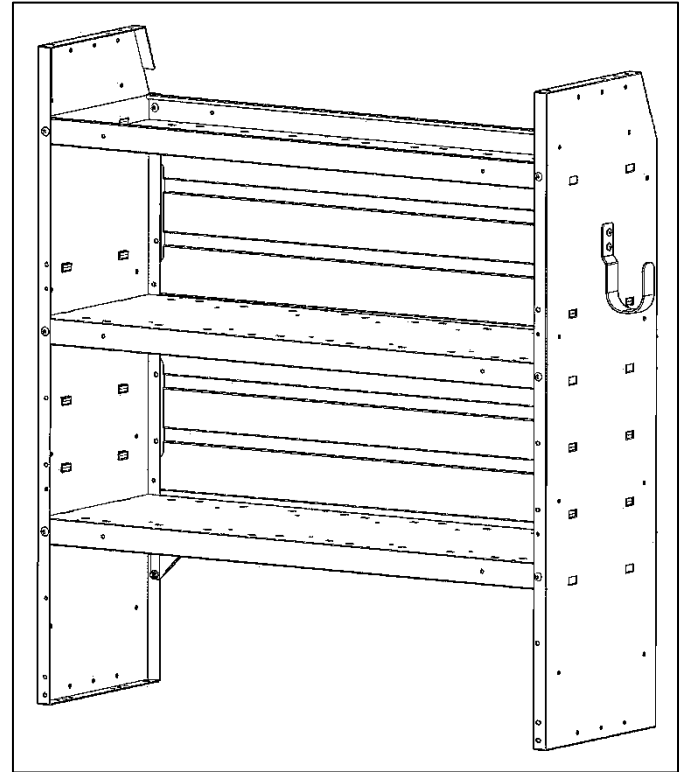

Step 2 – Attach Hook

- Bolt together using a 1/4" x 5/8" round head (1) on the single hook (A) side and a 1/4" nyloc nut (2) on the side of what ever the hook is mounted to.

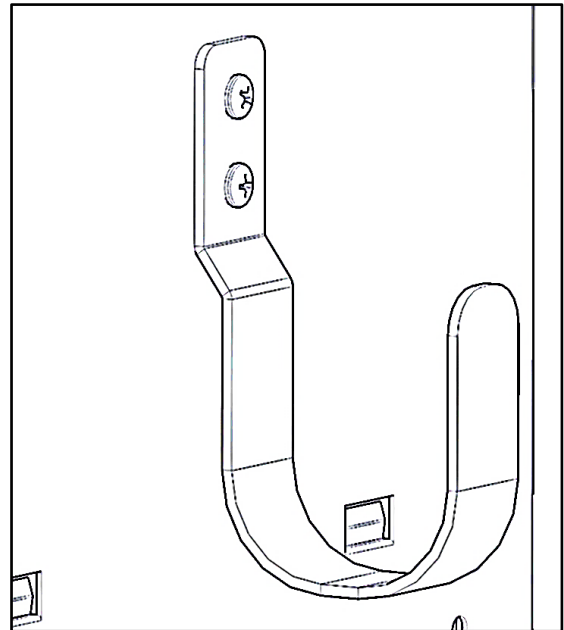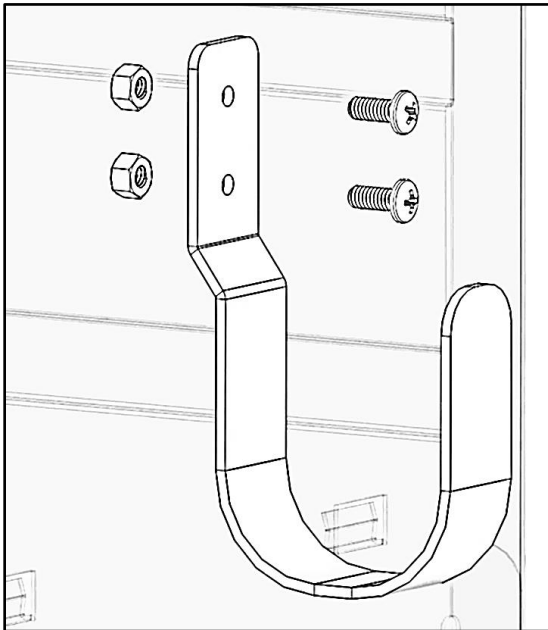

Ensure all bolts are tight. Your installation is now complete.