
Instruction Guide

40542

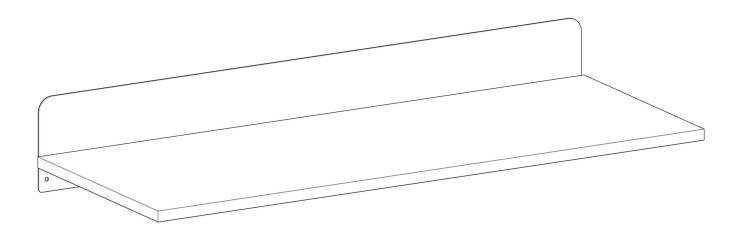

Holman Rancho Cordova, CA 95742 800-343-7486 InstallationSupport@holman.com

20220614R2

DATE: _____

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

Phillips Driver

Table of Contents

Parts List	2
Hardware	
Step 1 – Assemble Shelf	
Step 2 – Prepare Shelf Unit	
Step 3 – Install Back Splash	
Step 4 – Install Bench Top	

Before You Begin

- Read all instructions.
- Be sure to have a shelf unit to attach bench kit to.
- The images in the instructions are shown using a 32" wide shelf. The instructions are the same in this application.

<u>Parts</u>


ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
A		100572	BENCH TOP - 42"	1
В	° .	48420-00-001	BACK SPLASH - 42''	1
		18-40552	HARDWARE	1

<u>Hardware</u>

ITEM NO.	TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		90398A244	No.10 x 5/8" Round Head Screw	5


Step 1 – Assemble Shelf

 Have desired shelf unit built. Be sure the top shelf is on the highest notch and oriented with shelf lip down as shown.

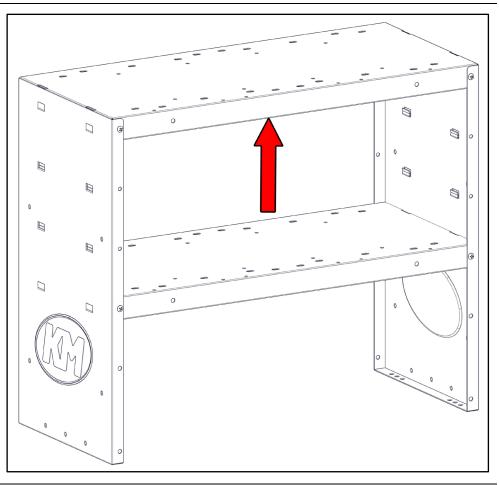


<u>Step 2 – Prepare Shelf Unit</u>


- Access rear of shelf unit. Rear of shelf unit has gussets installed on the bottom shelf.
- Remove upper screws attaching top shelf to side panels as shown.

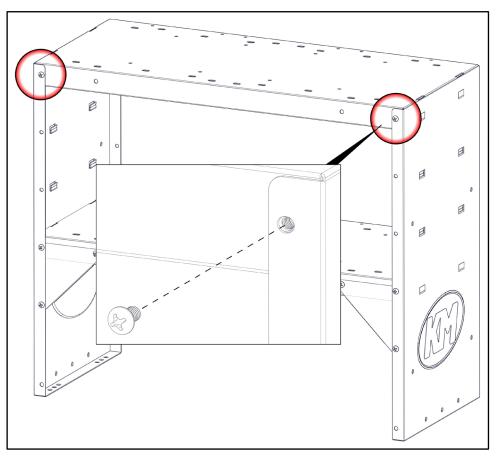

<u>Step 3 – Install Back Splash</u>


- Place back splash over previously removed screws.
- Re-install screws leaving the middle hole in back splash vacant.
- Snug Tighten.

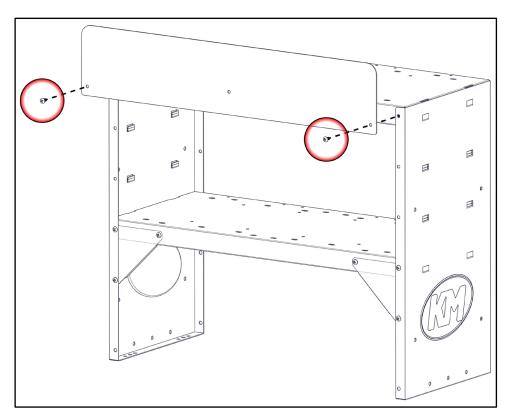


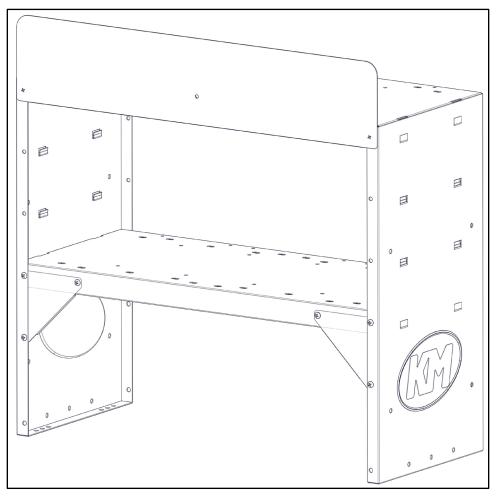

<u> Step 4 – Install Bench Top</u>

- Place bench top on top of shelf as shown. Align bench top to desired location.
- Screw bench top to back splash using a No.10 screw.
- On bottom side of shelf, find four appropriate mounting holes. Screw through these holes into bottom side of bench top using No.10 screws.
- Tighten all screws.

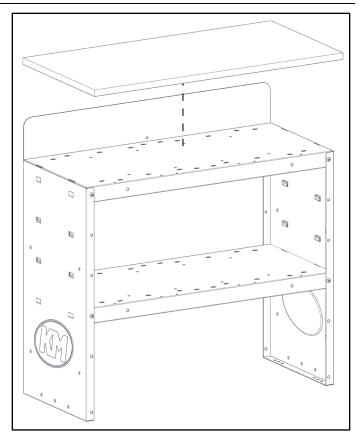

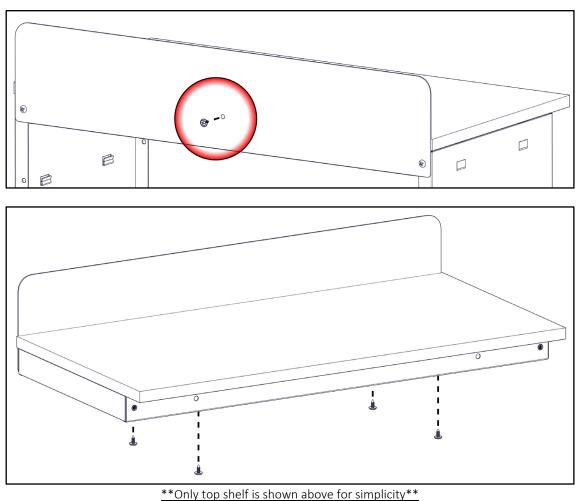

GO BACK AND ENSURE ALL HARDWARE IS TIGHT

Installation is now complete

