

Holman

Installation Guide 40651

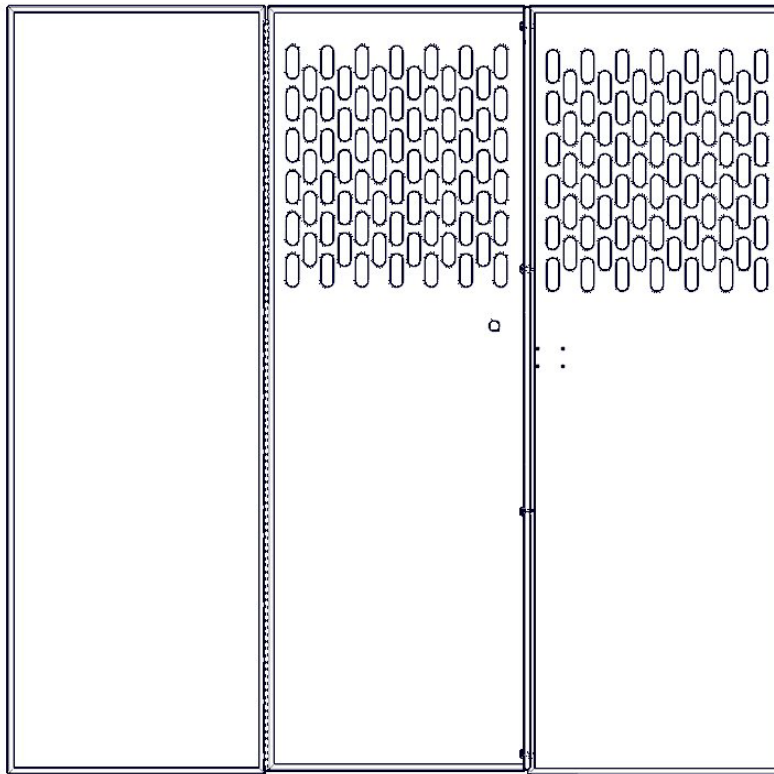

Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

***PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING,
INSTALLING, AND USING THIS PRODUCT***

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Wrench and Socket	7/16" Wrench and Socket
------------------------	-------------------------



Table of Contents

Parts List	2
Hardware List	2
Step 1 - Bolt Together	3-4



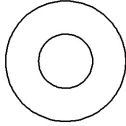
Before You Begin

- Read all instructions

Parts

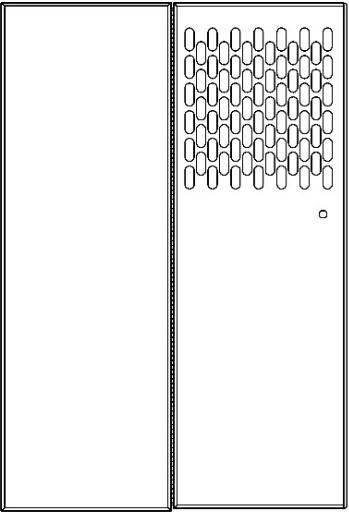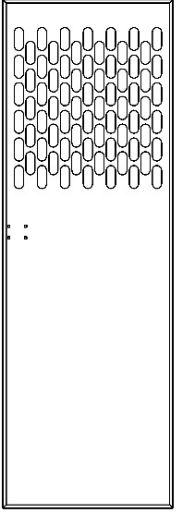
ITEM NO.	40651 PARTS	DESCRIPTION	QTY.
A		Partition Door Assy.	1
B		Partition Side Panel	1

Hardware


ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11106180	1/4"-20 X 5/8" FLANGED HEX HEAD	4
2			1/4-20 FLANGED NYLON INSERT NUT	4
3		11541082	1/4" FLAT WASHER	8

Step 1 – Bolt Together

- Place both pieces (A & B) flat on the ground or table. Be sure to have the flanges facing upward so you can access the bolt holes.

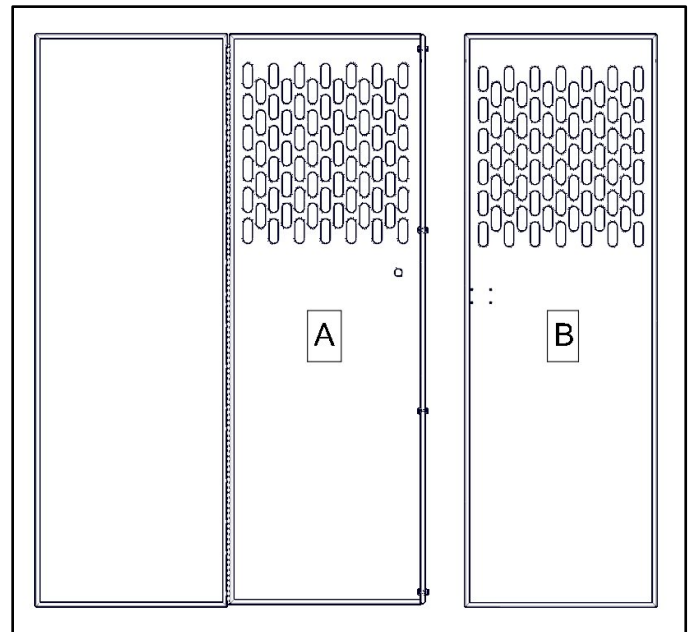

- Bolt together using a 1/4" x 5/8" flanged hex bolt and a 1/4" flanged lock nut.
- If installing the Center Panel Latch & Door Lock Kit (40620), be sure to put two flat washers in between the two panels. This is used to get correct spacing.
- If no door kit is being used the washers (3) are not needed.

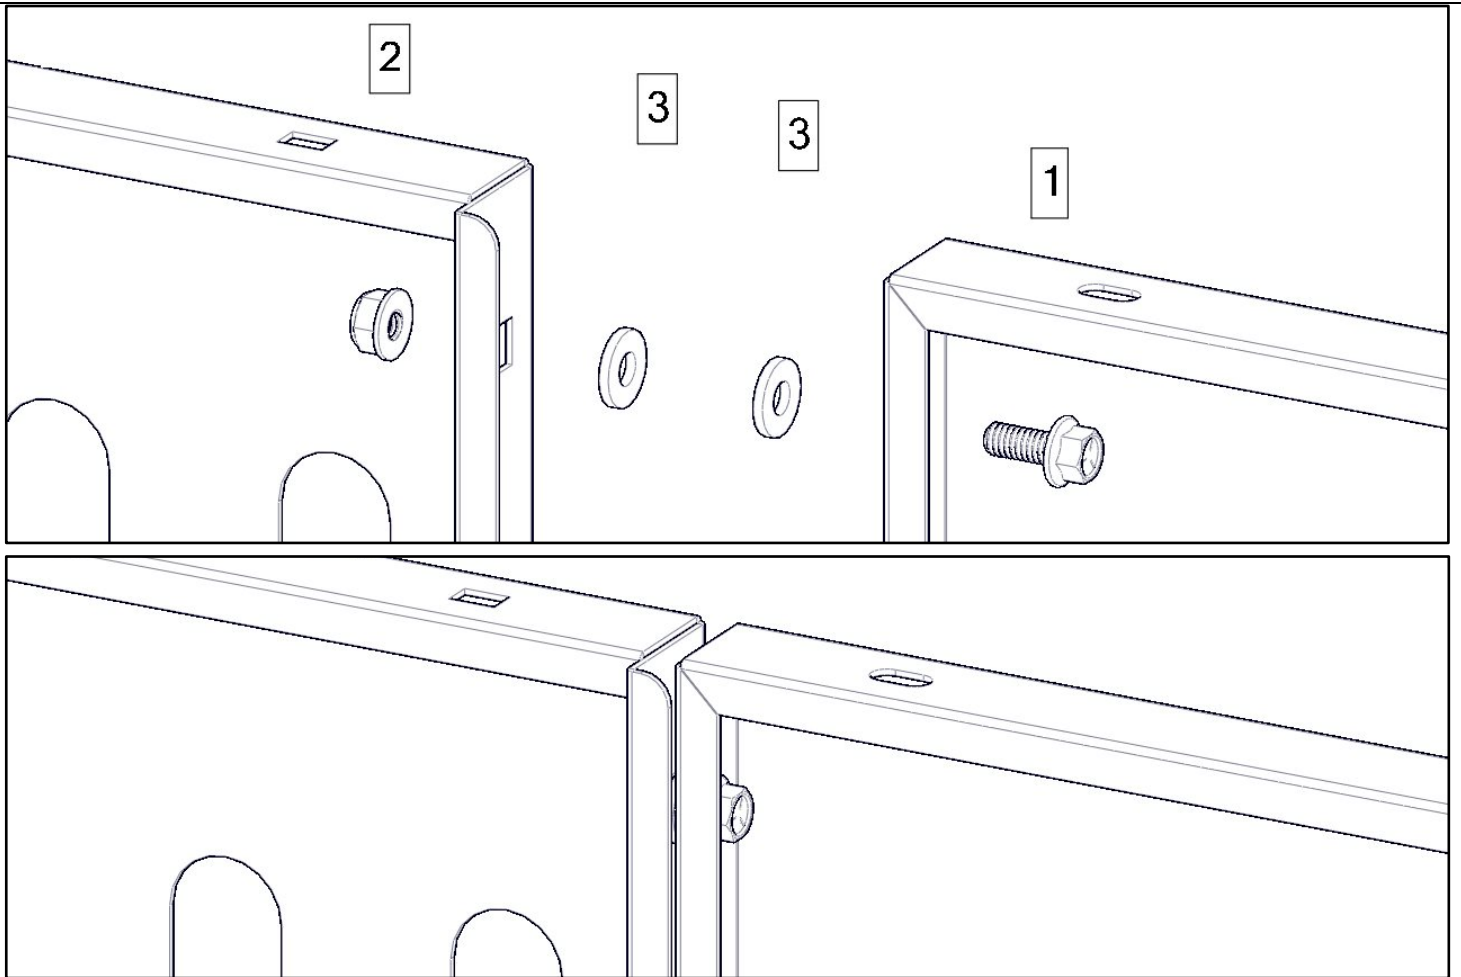

- Repeat 3 more times as shown. Be sure to insert the washers between the panels if needed.
- Some like to leave bolts snug tight to allow movement until partition is installed into vehicle.

Follow instructions of desired wing kit to install into vehicle.

