




WE PUT EVERYTHING WITHIN REACH.

Instruction Guide

Window Screen

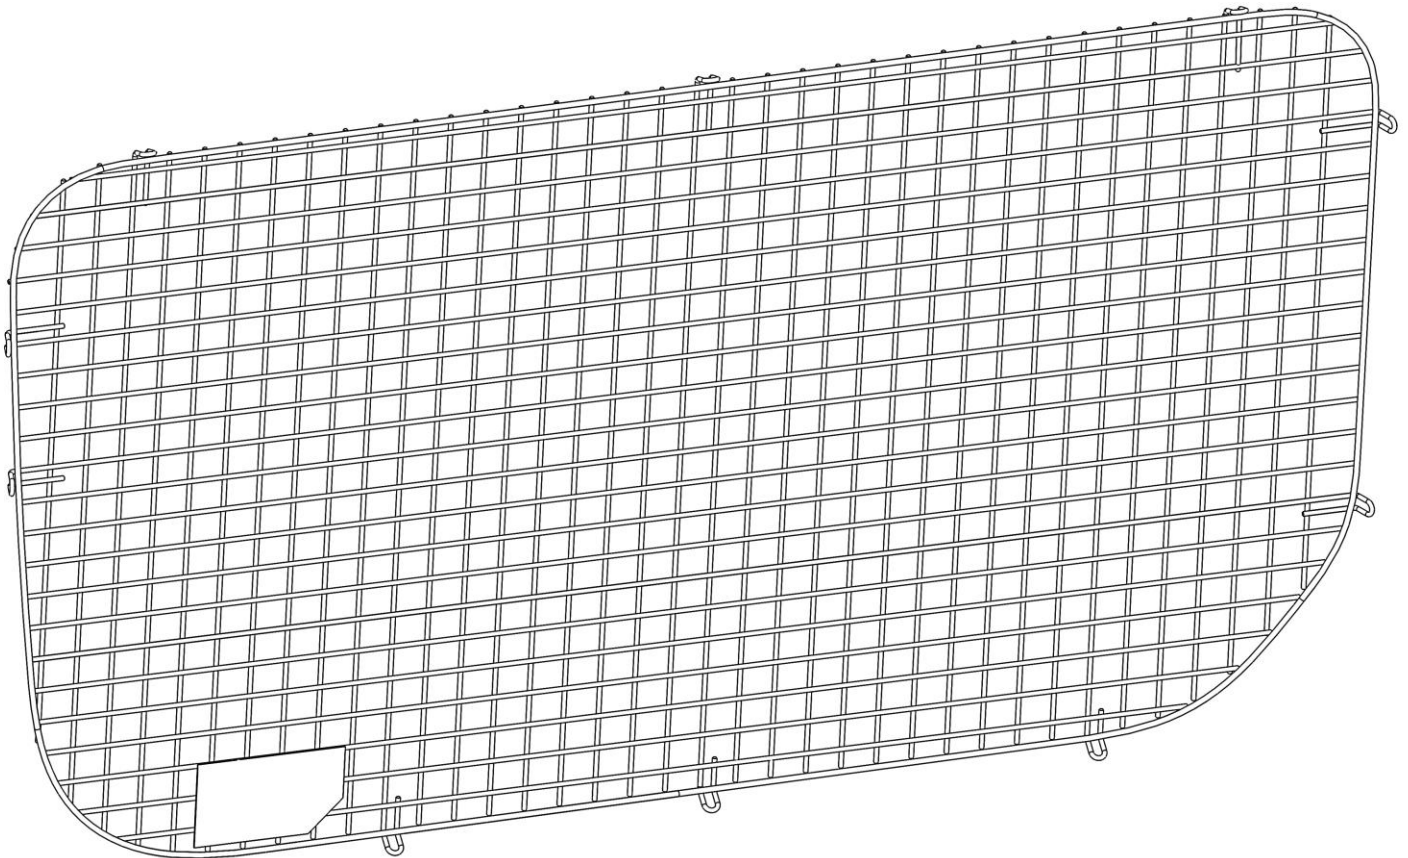

Kargo Master
Rancho Cordova, CA 95742
800-343-7486
CustomerService@KargoMaster.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for electrical wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

#3 Phillips Head Screw Driver	3/16" Drill Bit
Drill	

Table of Contents

Parts List 1


Hardware 2

Install Window Screen 3



Before You Begin

- Read all instructions prior to installing any Kargo Master product.

Parts List

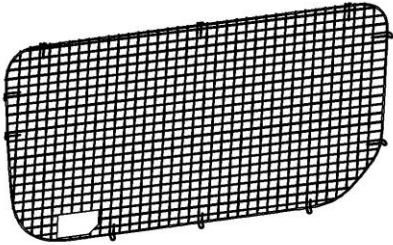
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
1		-	WINDOW SCREEN	1 OR 2
2		SEE BELOW	HARDWARE KIT	1

Hardware



WINDOW SCREEN	DESCRIPTION	HARDWARE KIT	QTY REQUIRED	HARDWARE DESCRIPTION	
4070C	GM SIDE HINGED DOOR	18-407X20	17	<p>#12-11 X 3/4" PHILLIPS HEX HEAD SHEET METAL SCREW</p> 	
4071C	GM SLIDING SIDE DOOR	18-407X20	16		
4072C	GM REAR DOOR	18-407X20	20		
4070T	TRANSIT LOW ROOF HINGED SIDE DOOR	18-407X20	16		
4071T	TRANSIT LOW ROOF SLIDING SIDE DOOR	18-407X10	10		
4073T	TRANSIT REAR DOOR	18-407X20	16		
4075T	TRANSIT MID/HIGH ROOF SLIDING SIDE DOOR	18-407X10	10		
4076T	TRANSIT MID/HIGH ROOF REAR DOOR	18-407X20	16		
4079T	TRANSIT CONNECT REAR DOOR	18-407X15	12		
4070TC	105" TRANSIT CONNECT PASSENGER SIDE SLIDING DOOR	18-407X10	7		
4071TC	105" TRANSIT CONNECT DRIVER SIDE SLIDING DOOR	18-407X10	7		<p>#12 EXTERNAL TOOTH LOCK WASHER</p> 
4072TC	120" TRANSIT CONNECT PASSENGER SIDE SLIDING DOOR	18-407X10	9		
4073TC	120" TRANSIT CONNECT DRIVER SIDE SLIDING DOOR	18-407X10	9		
4070P	PROMASTER PASSENGER SIDE SLIDING DOOR	18-407X10	10		
4071P	PROMASTER REAR HINGED DOORS	18-407X20	16		
4070S	2019+ SPRINTER DRIVER SIDE SLIDING DOOR	18-407X10	10		
4071S	2019+ SPRINTER PASSENGER SIDE SLIDING DOOR	18-407X10	10		
4072S	2019+ SPRINTER REAR HINGED DOORS	18-407X15	14		

Install Window Screen

- Hold window screen firmly in location and position to be installed. Be sure the small metal plate is located nearest the door lock.

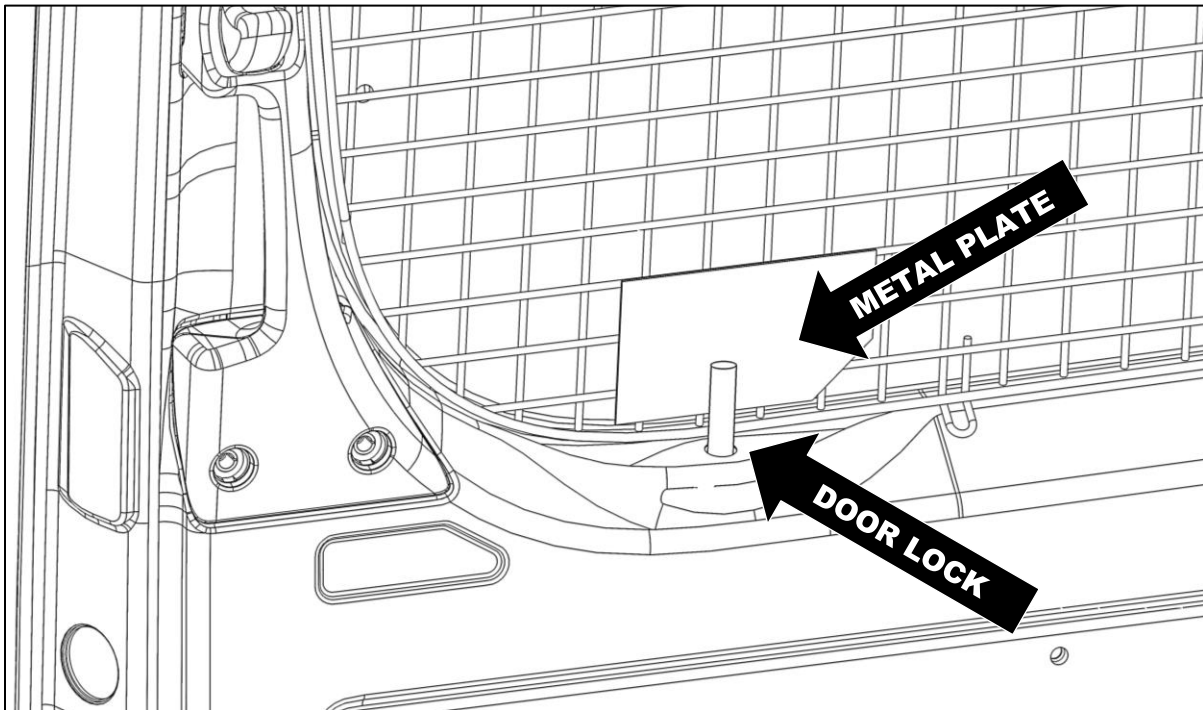

- Mark location of each screen attachment point onto door. The screen will attach through the wire loops extending from the window screen.
- Set window screen aside.
- Using a 3/16" drill bit and drill, drill a hole at each location marked.

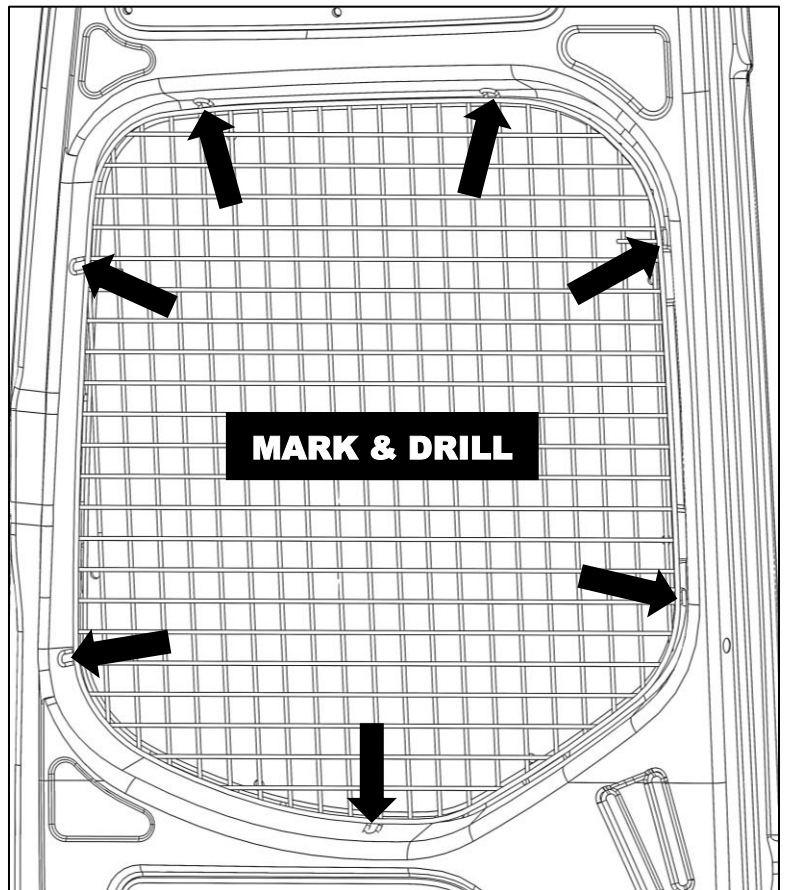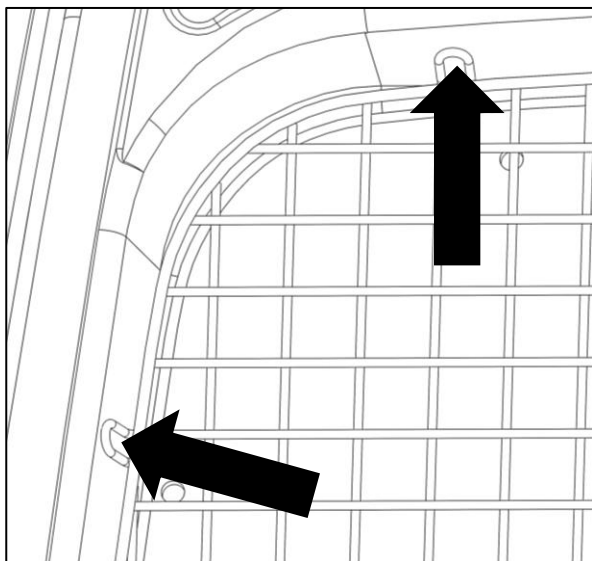

- Using #12 x 3/4" sheet metal screws, #12 external tooth lock washers, and screwdriver, loosely install the window screen to the door at each bent loop in the window screen. **DO NOT TIGHTEN screws until all screws have been loosely installed.**
- Tighten all screws.

ASSEMBLY IS COMPLETE

